

Extension installation guide

SUPPLIED PIECES



Tube of silicone





(12 x) #8 x 2 1/2 " r.w screws




Bag of #8 x 1/2" Pan screws

1. Insert the extension in its groove. Position the width and then the height.

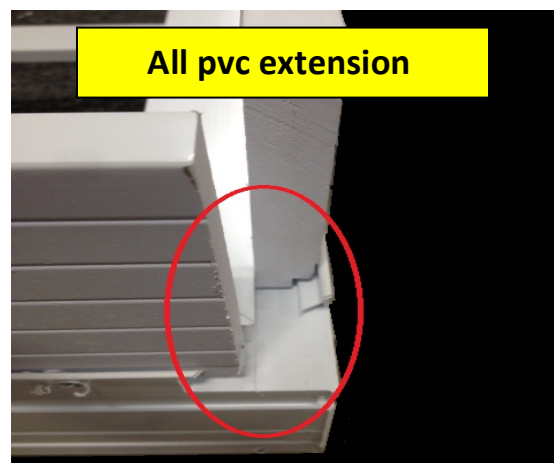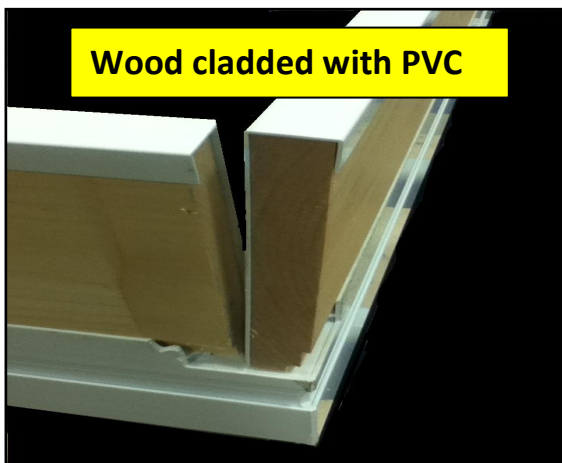


2. Screw the corners of the extensions (90°) with the #8 x 2-1/2" screws (round washer).

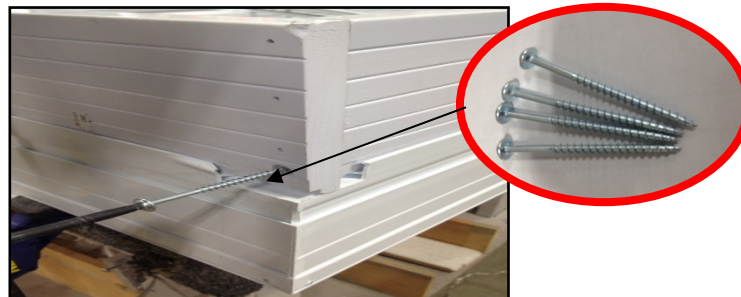

3. Screw the extension on the perimeter of the frame.

***Be sure that the extension is pushed all the way into the frame before screwing. (A sliding clamp can be used to ensure that the extension is well supported)**

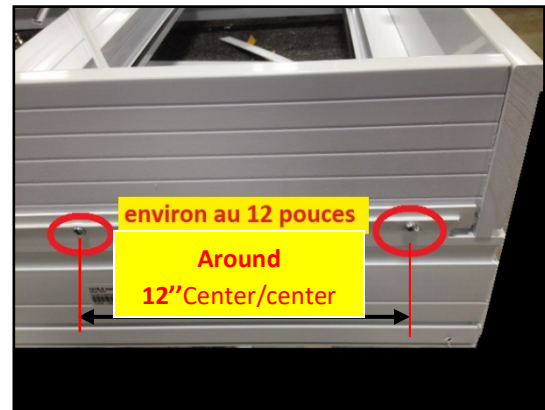

4. Seal all (4) corners of the extensions.

