Installation guide for opening limiter

SUPPLIED PIECES :

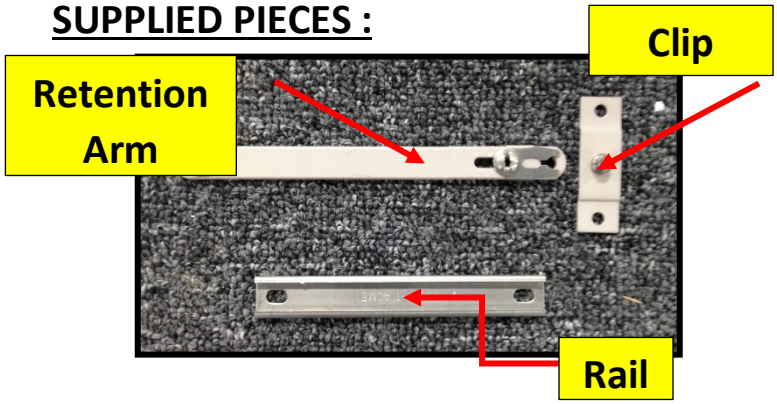

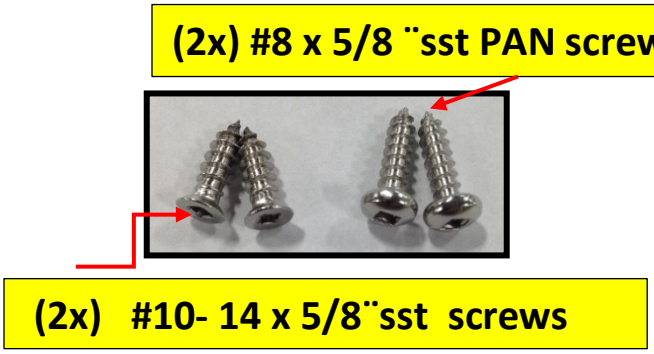

1. Drill a new water evacuation hole under the sash. (side opposite to hinges)

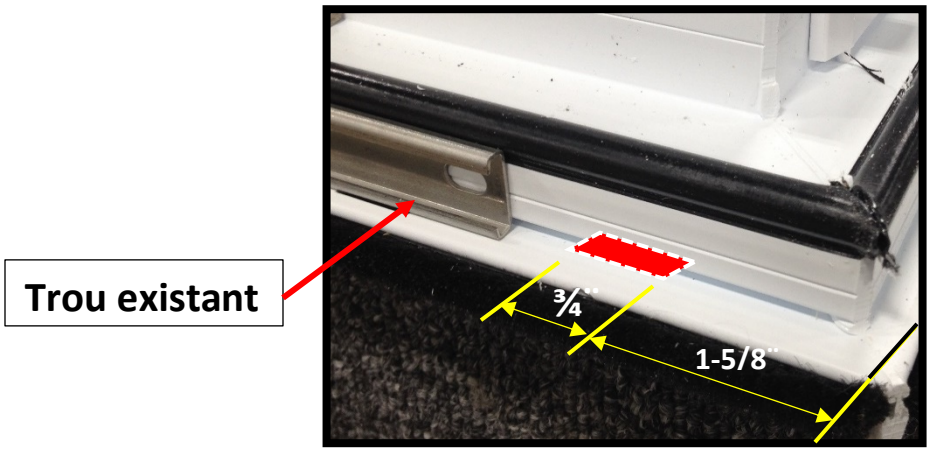

2. Position the rail on the side opposite to the hinges of the sash.

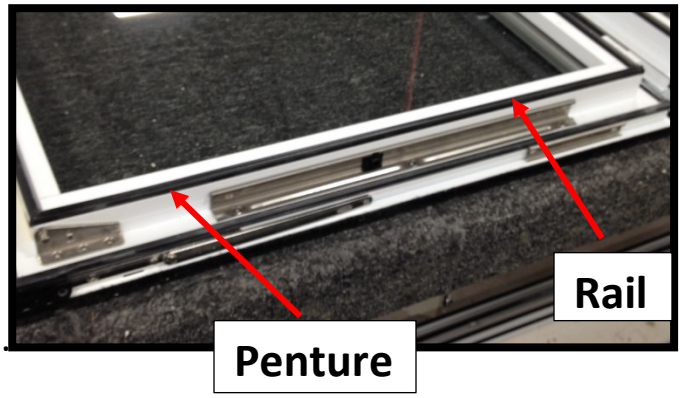

4065 Alfred-Laliberté | Boisbriand, QC J7H 1P7 | Tél. : 450-430-4486 | Fax : 450-430-3547 | www.dimensionspf.com

3. Fix the rail at a distance of 2- 1/2¨ (63 mm) from the corner of the sash with the help of the # 8 x 5/8¨ Pan. screws (round tip) *(See step #3 before screwing)

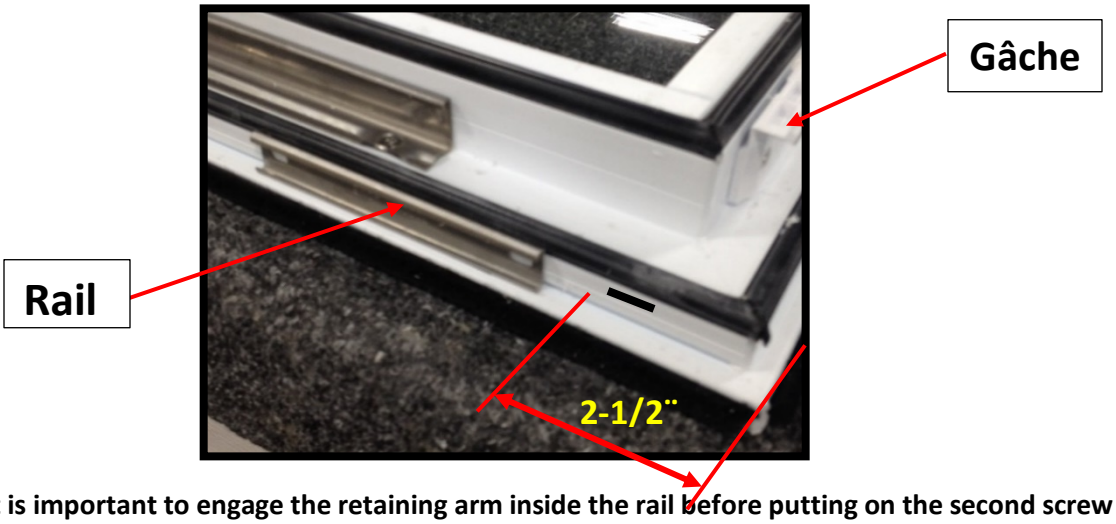

4. It is important to engage the retaining arm inside the rail before putting on the second screw on the rail

5. Position the limiter clip on the bottom corner on the multi-point side.
*Use the #10-14 x5/8¨sst scews

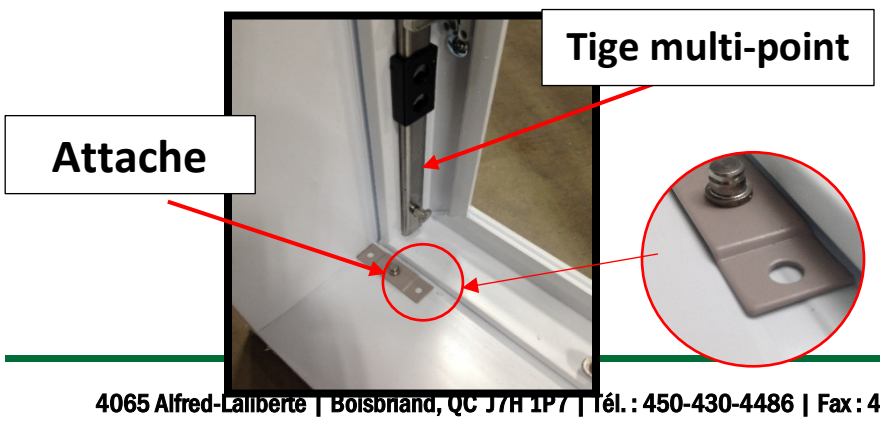
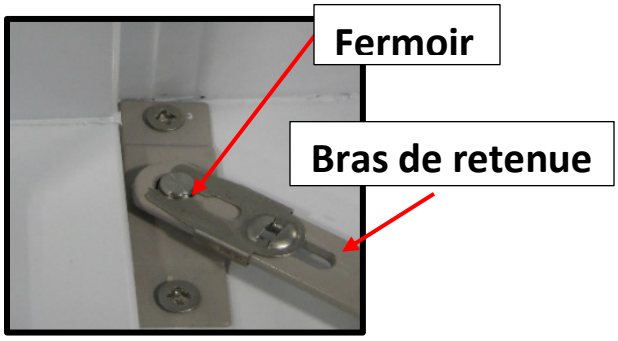
6. Finally fix the retention arm on The clip and slide the closer