


Thermos installation guide

SUPPLIED PIECES:

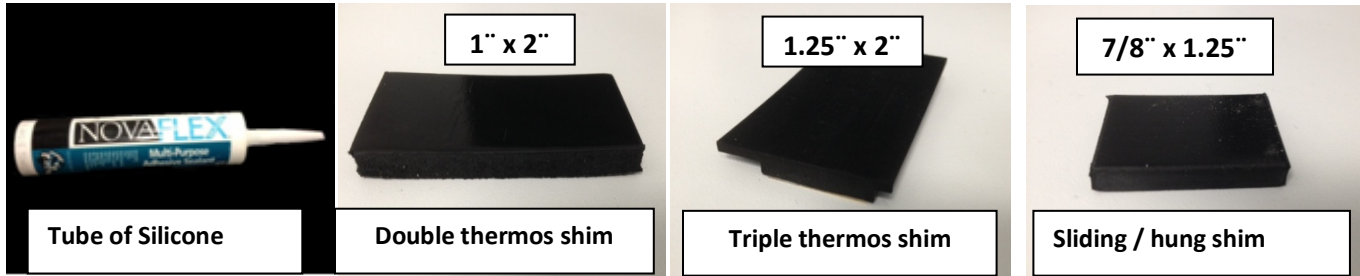

1. Apply caulking on all (4) corners (frame or sash) at the black coex or white sticker depending on the type of window.



Casement (fix / operating)




Sliding / Hung



2. Installation of shims see diagrams below***Never obstruct water drainage holes
Shims for casement sash:

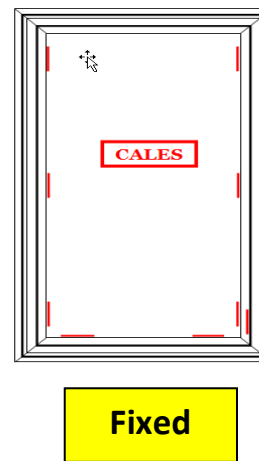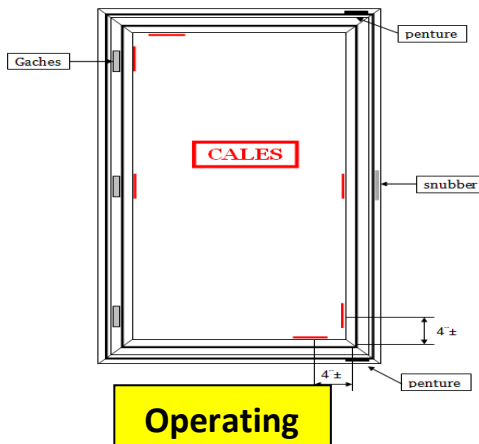


Shims for Sliding / Hung sashes : * It is important to remove the protection film on the sticker before installing the thermos.**

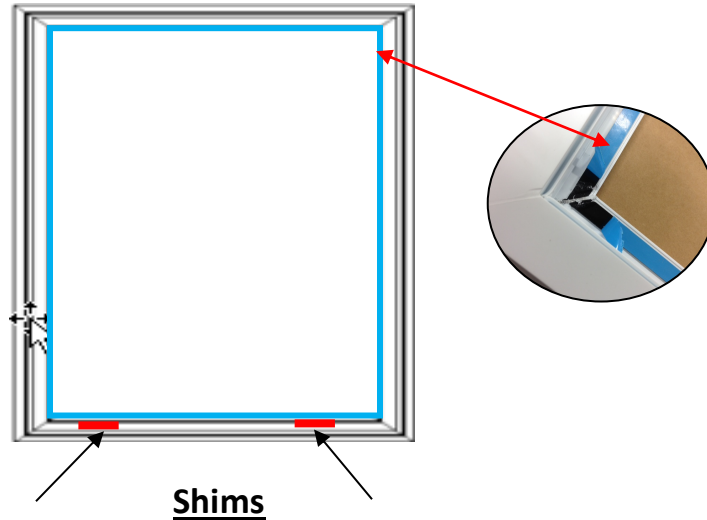


3. Install the thermos while pressing down on the bottom shims.



4. **It is important** to apply a «U» of silicone caulking on the bottom before installing the window stop. (casement windows only: fixed or operating)

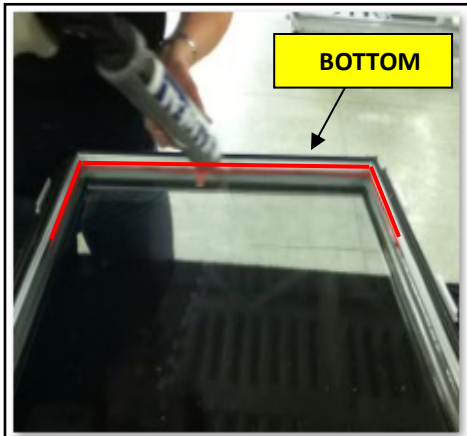

SASH

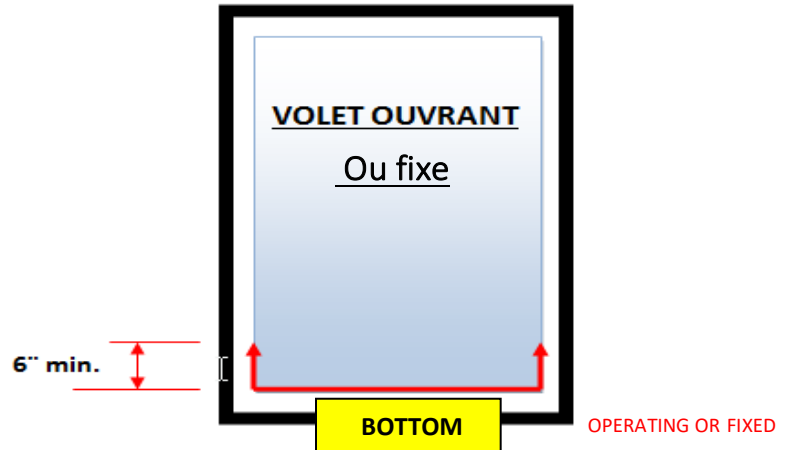

5. Install the window stops, Install the widths and then the heights.

For double thermos



For triple thermos



Use a rubber hammer



In the case of non compliance with this assembly procedure, no warranty can be applied